


# Sources for stand alone link room speakers 1

A Masterlink Link room product like the Beolab 3500 can work as a stand alone system by attaching a Beolink converter type 1611 or 1612 to the Masterlink connection.

The AAL connector on the Beolink Converter will be activated by an Audio or video source command. The Link room speaker has to be set to L.OPT 6 to be able to receive both audio and video commands.

A MCL2AV (L.OPT. 2.5) connected to the AAL connector on the Beolink converter makes it possible to control Beogram / Beogram CD with the CD command and Beocord tape players with the A.TAPE or A.MEM command. The connected players have to be datalink compatible and have all 7 pins in the DIN connector.

An additional source can be connected to the Beolink converter with a 7 PIN Audio Aux splitter. This source can be activated by any video source command.

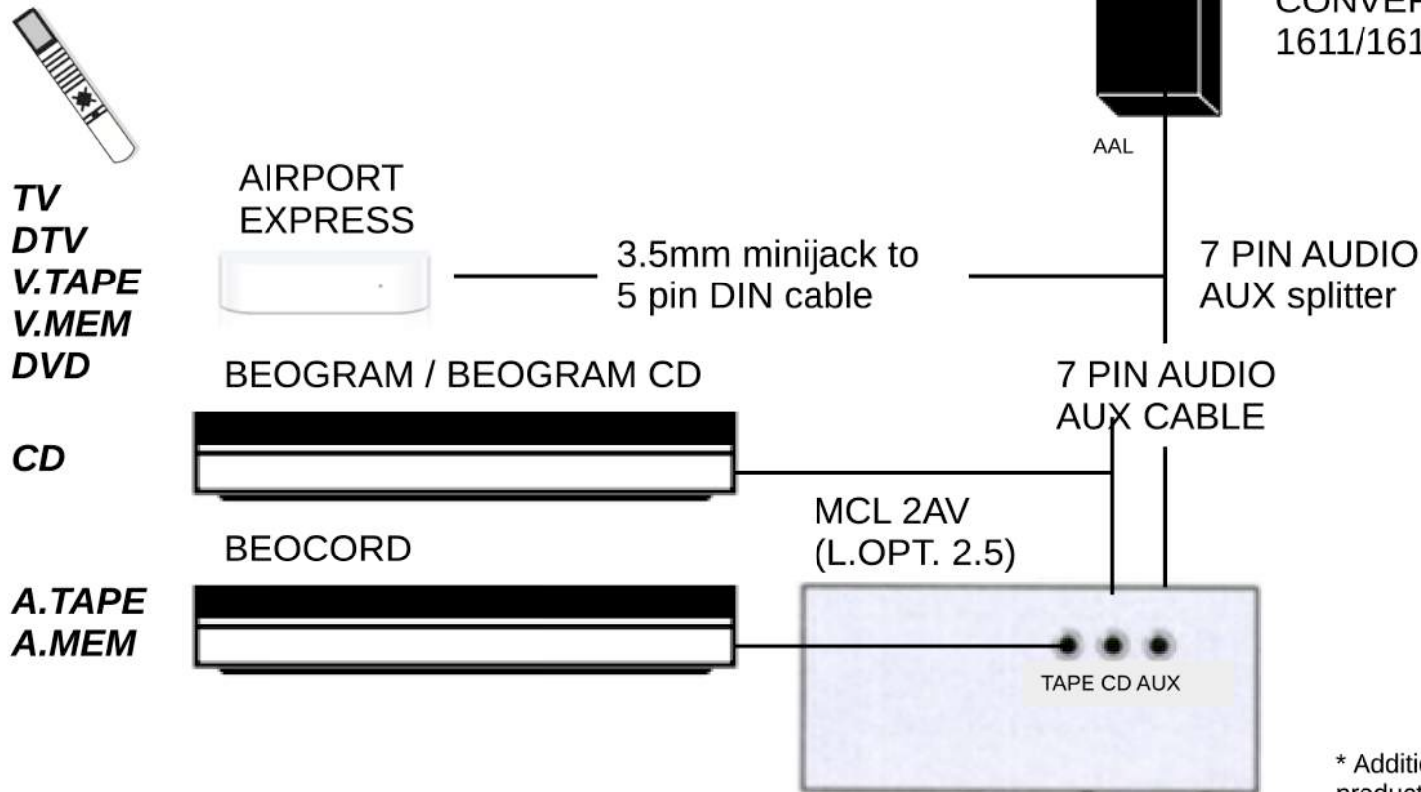

\* Additional Masterlink link room products like Beolab 2000, Beolink Active or Beolink Passive can also be used or added in this setup. The setup will not work if a Beosound with Masterlink is connected as Audio Master.